



TC-125 User's Guide

Last updated: Jan. 2008

Using the TC-125 with the Operator Console

Get an outside line	Press LINE
Answer a ringing line	Press LINE
Put call on hold	Press PBX HOLD
Retrieve from hold	Press LINE
Call pickup	Press LINE or PICK UP ANY
Hands free call	Dial * then the <ext>
Direct call transfer	XFER <ext> (note 1)
Call transfer to voice mail	TRANS V-MAIL
Public announce	199
TC-6000 announce	198
Conference call	CONF <ext> CONF
Record this conversation	{flash} 183
Allow speaker ring	190
Disallow speaker ring	191 (note 2)
Set key mode & address	192 (note 3)
Cancel key mode	193
Log into your voice mail	Press MESSAGE (note 4)

Operator Console LED Display

Line status	LED display	Color
Available	OFF	
Ringing	Ring pattern	RED
Busy	ON	RED
Busy (I am on this line)	ON	GREEN
On-hold (my line)	Fast blinking	GREEN
On-hold (not my line)	Fast blinking	RED

Notes

1. Consult the User's Manual for additional information regarding blind and supervised transfers.
2. Use code 191 to prevent hearing ringing lines. Do not lower the speaker volume since you will not be able to hear anybody who initiates a hands-free conversation.
3. Use code 192 (and 193) only at Installation.
4. Press 180 * <hunt> to access hunt groups mailboxes.



TC-125 Detailed Initial Programming

NOTE: *This document is written for the installer and for the System Administrator. "Regular" telephone users do not need it.*

Follow these steps to program your new phone to work with GCT's TeleCraft telephone systems. Please refer to the telephone manual for additional information.

1. Insert the batteries and connect the power supply.
2. Place the white telephone label over the existing label.
3. Press {flash}, then press the PBX HOLD key till you see SAVE OK.
4. Press * 7, then press the PICK UP ANY key till you see SAVE OK.
5. Press {flash}, then press the XFER/CONF key till you see SAVE OK.
6. Press {flash} 180 * then press the TRANS V-MAIL key till you see SAVE OK.
7. Press *81, then press the MESSAGE key till you see SAVE OK.
8. Press * 8 43, then press the CALL FORWARD ON key till you see SAVE OK
9. Program the LINE buttons:
Press and hold the LINE 1 button until you see a cursor flashing on the display.
Press 81
Press SAVE. Now the cursor is at the bottom of the display.
Press the digit 5 three times to display "L"
Press the digit 4 three times to display "I"
Press the digit 6 twice to display "N"
Press the digit 3 twice to display "E"

Press the right arrow twice to leave a space
Press the digit 1 to display "1" (change it to "2" for LINE 2, etc).

Press SAVE again. You'll see SAVE OK on the LCD.

10. Repeat step (9) above for the rest of the LINE buttons as follows: for LINE 2, enter 82, LINE 3 enter 83 and so on.



Copyright © 1996-2008 by General Computer Technology.
All Rights Reserved. Printed in the United States of America.

Information in this document is subject to change without notice.
Document No. GCT-212-0906

GCT and TeleCraft are trademarks of General Computer Technology.